

AK-60 USB MICROPHONE



User Manual
Professional

SPECINCATION

Directional	Cardioid
Sensitivity	-42±3dB (1.5V;680KΩ;0dB=1V/Pa;1kHz)
Frequency Response	100Hz-18000Hz
Output Impedance	<680Ω
Signal to noise ratio	>70dB
Maximum Sound Pressure Level	125dB

PACKING LIST

1. Condenser Microphone
2. Adjustable Suspension Scissor Arm Stand table mounting clamp
3. Table Mounting Clamp
4. Metal Shock Mount
5. Pop Filter
6. Ball-type Anti-wind Foam Cap
7. USB cable
8. Magic Tape



HOW TO INSTALL


1. Remove the microphone set and check that the accessories are complete
2. Mount the bracket base to the edge of the table, insert the cantilever bracket into the bracket base
3. Screw the metal shock mount into the cantilever bracke
4. Fix the condenser microphone on the metal shock mount by pinching the clamp of the metal shock mount
5. Secure the blowout preventer to the cantilever bracket and displace it in the appropriate position



6. Connect the USB cable directly to the laptop to work properly



7. Adjust the microphone to the right position and angle

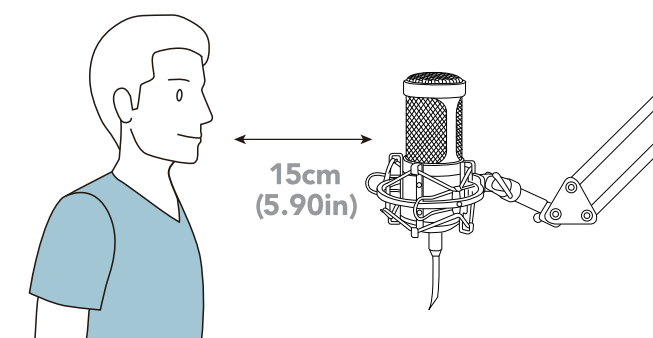


SYSTEM PREFERENCES


To manually adjust your input level via your computer's system preferences, use the following instructions relevant to your device platform/operating system.

Adjusting the input level on a Mac OS computer:


1. Click on the Apple symbol at the top left of your screen, and select System Preferences.

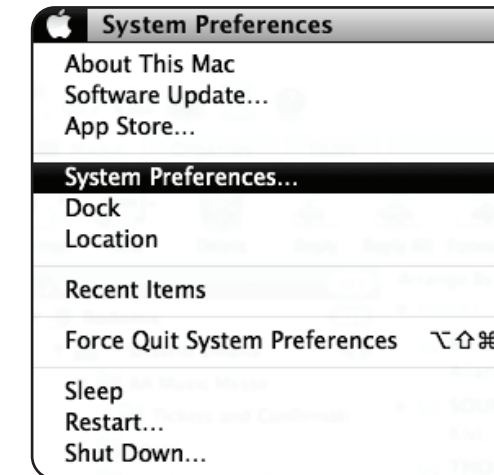

2. Click on 'Sound' to open the sound options.

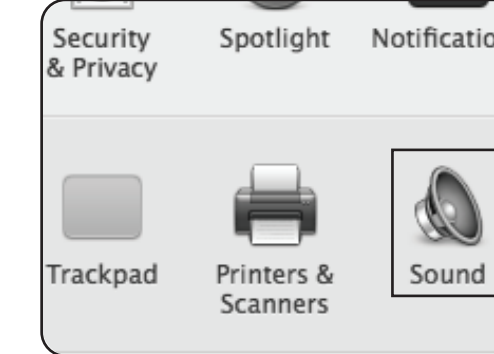


3. Open the 'Input' tab'.
4. From here, select the 'AK-60' from the list of devices, and adjust the input level using the slider.

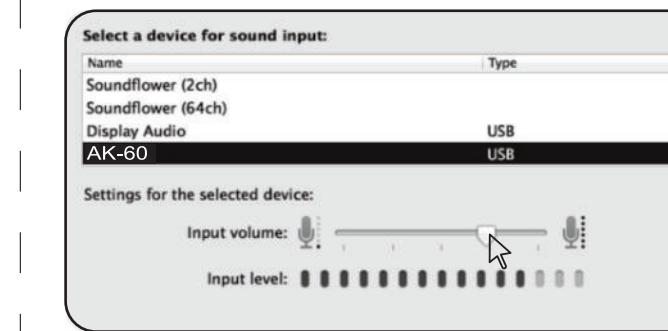


Adjusting the input level on a Windows computer:


1. Use the right mouse button, click the speaker icon at the bottom right of the screen, and click "Open Sound Settings".

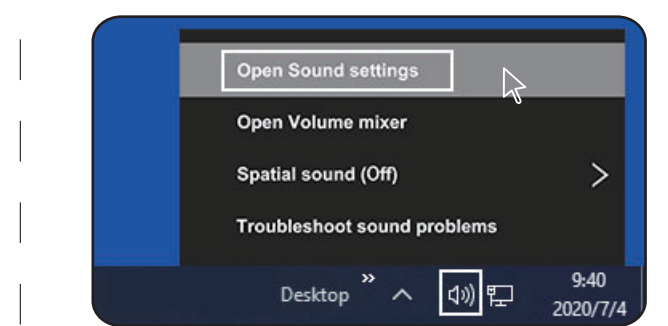


2. Open the 'Recording' tab and Click "AK-60", click below to set as the default device

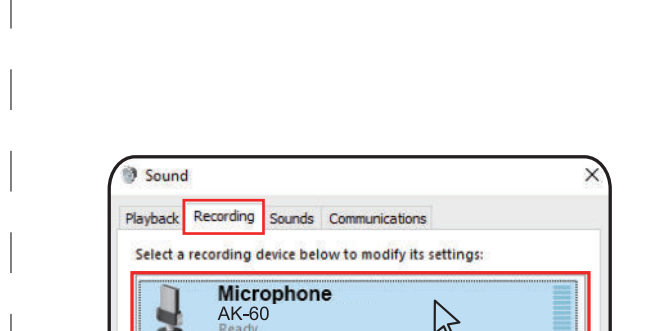


3. Double click on 'AK-60' from the list of devices.

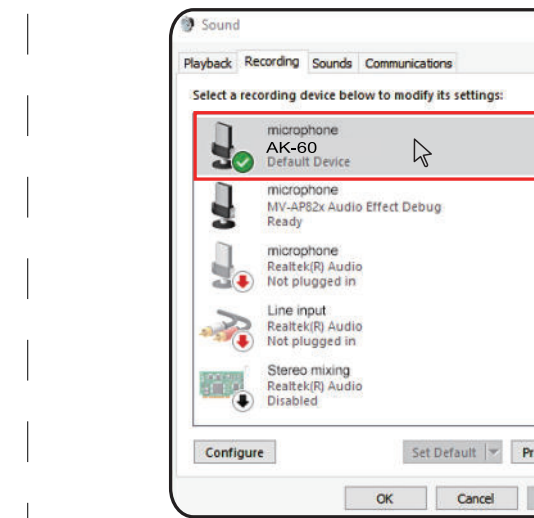


4. Adjust the microphone input volume using the slider. (You can adjust the volume of microphone recording here.)

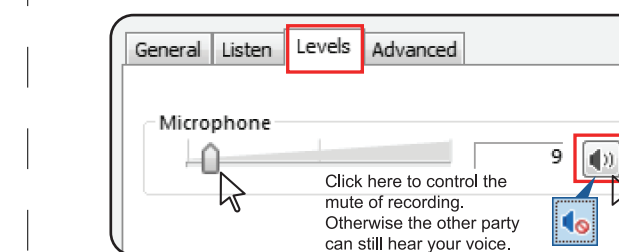


5. Open the 'Playback' tab and Click "AK-60", click below to set as the default device (If you don't need to output at the microphone port, you can switch the computer output as the default device)

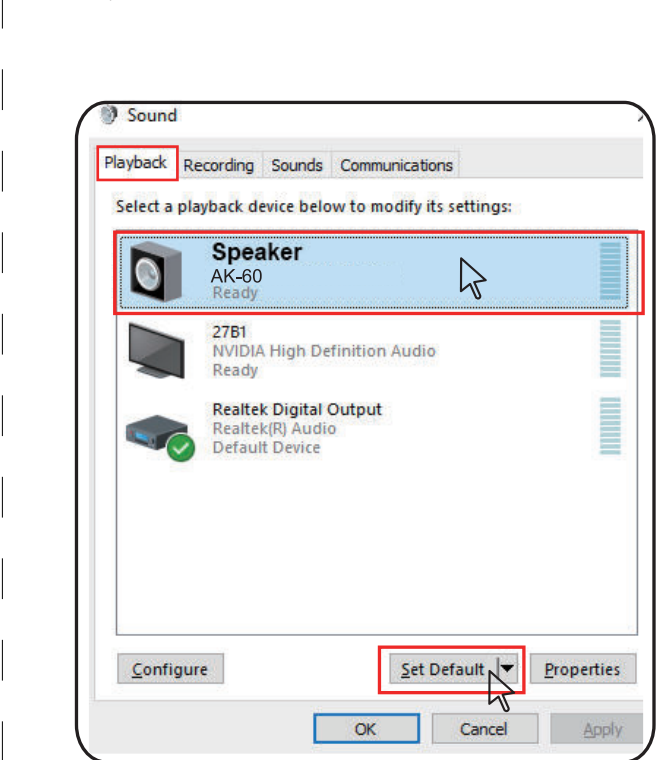

6. Double click Speaker(AK-60), to enter the adjustment interface.

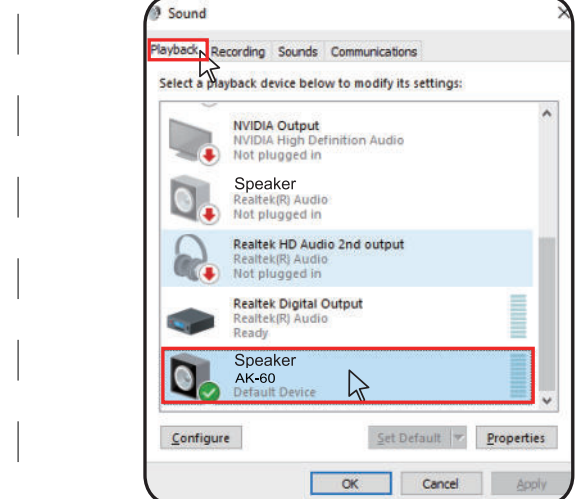

7. Click "Levels", Adjust the monitor volume and computer music volume.

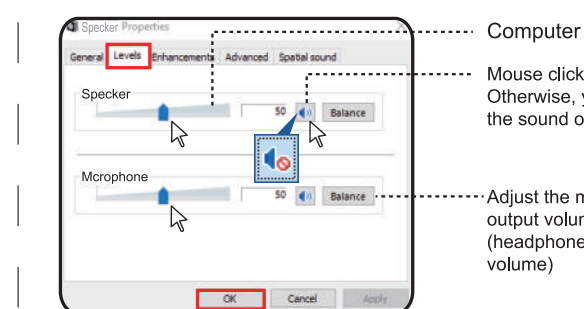

Computer Music Volume
Mouse click here to mute; Otherwise, you can still hear the sound of multimedia.

Adjust the microphone output volume here (headphone monitoring volume)

AOKEO スタジオマイク




ユーザーマニュアル

スペック

指向性	ハート型指向性
感度	-42±3dB (1.5V/680KΩ; 0dB=1V/Pa;1KHz)
周波数応答	100Hz-18000Hz
出力インピーダンス	<680Ω
信号対雑音比	>70dB
最大音圧レベル	125dB

包装内容明細書

1. コンデンサーマイク
2. 調整可能な吊り金アームブラケットのワークベンチ取り付けクリップ
3. 作業台固定クランプ
4. 金属の衝撃吸収材
5. ポップフィルター
6. 球面防風フォームキャップ
7. USBケーブル
8. マジックテープ

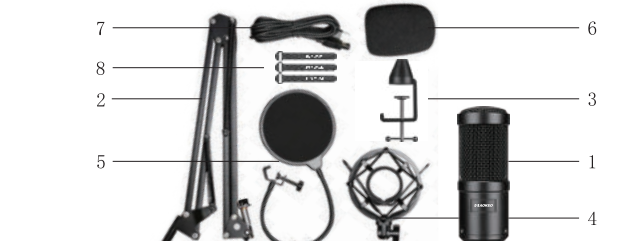

インストールする方法


1. マイクセットを取り外し、付属品が完全であることを確認します
2. ブラケットベースをテーブルの端に取り付け、カンチレバーブラケットをブラケットベースに挿入して
3. 金属製のショックマウントをカンチレバーブラケットにねじ込みます
4. 金属製ショックマウントのクランプをつまんで、金属製ショックマウントにコンデンサーマイクを固定します
5. 噴出防止装置をカンチレバーブラケットに固定し、適切な位置に移動します。



6. USBケーブルをラップトップに直接接続して、正しく動作するようにします



7. マイクを正しい位置と角度に調整します

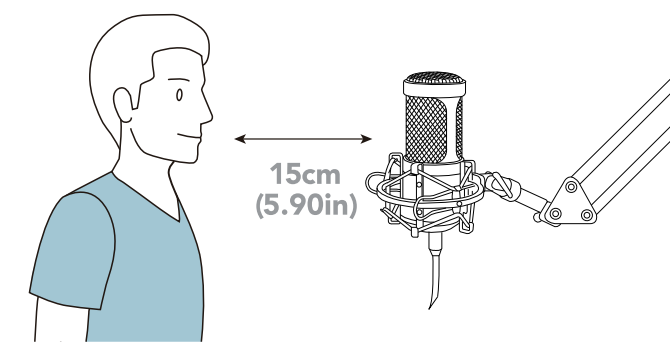


マイクの設定


コンピュータのシステム環境設定を使用して入力レベルを手動で調整するには、デバイスプラットフォーム/オペレーティングシステムに関連する次の手順を使用してください。

MAC OSコンピュータでの入力レベルの調整:


1. 画面の左上にあるAppleの記号をクリックして、[システム環境設定]を選択します。

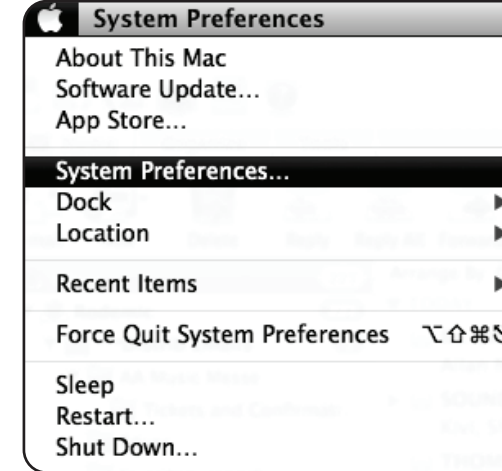

2. [サウンド]をクリックして、サウンドオプションを開きます。

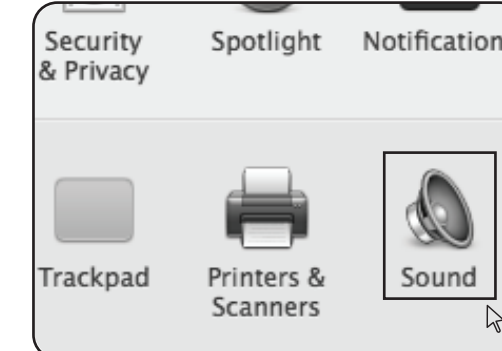


3. [入力]タブを開きます。
4. ここから、デバイスのリストから「AK-60」を選択し、調整します。スライダーを使用した入力レベル。

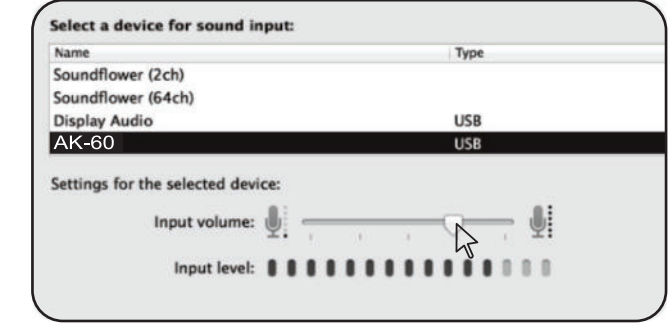


WINDOWSコンピュータでの入力レベルの調整:


1. コンピュータ画面の右下にあるスピーカーアイコンを右クリックし、[サウンド設定を開く]をクリックします

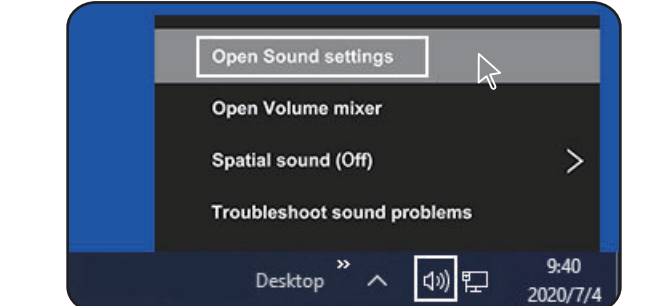

2. [録音]タブを開き、[AK-60]をクリックして、下をクリックして設定します。デフォルトのデバイスとして

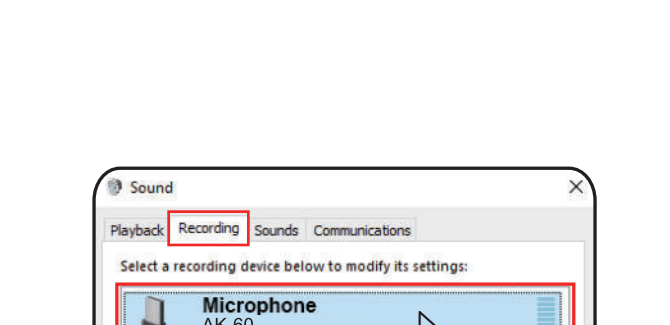


3. デバイスのリストから「AK-60」をダブルクリックします。

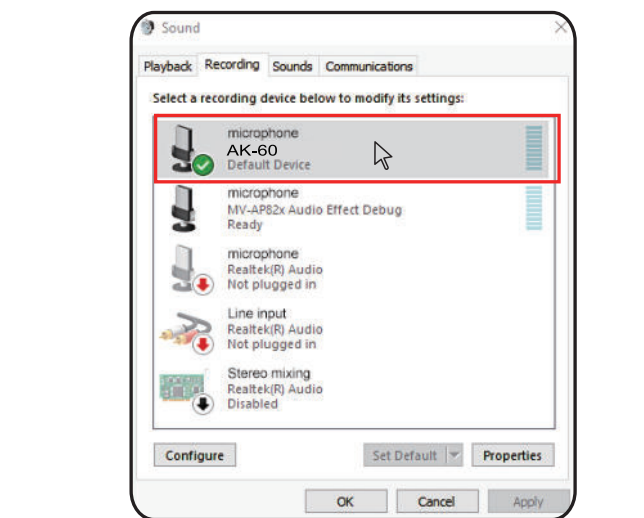


4. スライダーを使用して入力レベルを調整します。(ここでマイク録音の音量を調整できます)



5. [再生]タブを開き、[AK-60オーディオ]をクリックして、下をクリックして、スピーカー（AK-60）をダブルクリックして設定します。デフォルトのデバイスとして（マイクポートで出力する必要がない場合は、コンピュータの出力をデフォルトのデバイスとして切り替えることができます）

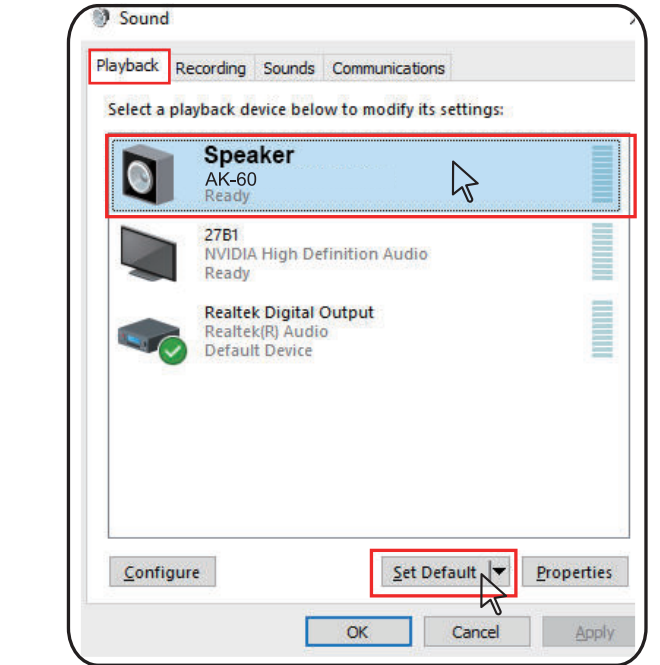

7. 「レベル」をクリックし、モニターの音量とコンピュータの音楽の音量を調整します。

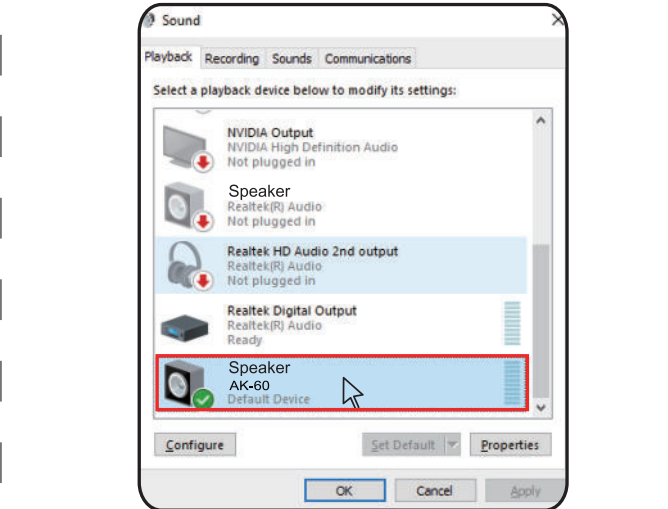

ここにクリックしてミュートしてください。クリックしないと、マルチメディアの音が聞こえます。

ここでマイクの出力音量を調節する（ヘッドホンのリスニング音量）。